

# Installation Instructions

## Background Music Volume Control Kit # 21639701

This volume control kit allows different volume levels for customer made selections and Autoplay. The STEREO options allow you to play customer selections at one volume and play Autoplay music at another volume. The speaker switching feature allows you to determine which rooms will receive customer selected music and which rooms will receive Autoplay music.

The MONO options allow you to control the volume in each of two rooms separately for both customer selections and for Autoplay music. The speaker switching feature allows you to determine which rooms will receive customer selected music and which rooms will receive Autoplay music.



### NOTE:

① This kit does not provide instructions on how to play external BGM sources through the phonograph's speaker system (order the Amplifier Accessory Board, Part Number 26694703, if you wish to play external music through the phonograph's speakers).

② Unless you are instructed otherwise, the instructions in this kit supercede any instructions that are supplied with other kits that you may need to install the options you have selected (As an example: If you have purchased a remote volume control, do not use the remote volume control instructions . . . Follow these instructions).

### Components Purchased Separately

Depending on the option that you choose, you may need to purchase one or more remote volume controls and corresponding cables. Refer to the following chart to verify that you have the correct remote volume control(s) and cable(s):

Remote Control Type	Stereo Options	Mono Options	Part Number
(Single) Remote Volume Control	B, C,	A, B, E <sup>1</sup>	30632201
Dual Remote Volume Control	D,	C, D, E <sup>1</sup> , F <sup>2</sup>	30632209
3-Conductor Cable	B, C	B, E <sup>1</sup>	20819907
4-Conductor Cable	D	C, D, E <sup>1</sup>	20819908
Integrated Circuit (PROM) <sup>3</sup>	All	All	70039903

<sup>1</sup>Requires one (single) Remote Volume Control and one Dual Remote Volume Control

<sup>2</sup>Requires two Dual Remote Volume Controls

<sup>3</sup>PROM Version 1.3 or higher is required by this kit. If multiple Autoplay ON/OFF times or Cancel Autoplay feature is required, Version 2.0 or greater is required. For descriptions of the Autoplay features and how to select these options, see Part III.

